

Thank you for purchasing The Can Topper!

As a Thank You for choosing The Can Topper, we would like to offer you 10% off your next 1TAC.com purchase. Use the code below for your next purchase on our website:

THANKYOU10



User Manual

The Can Topper





The Can Topper Features:

- Removing the top of the can allows for an uninterrupted pour
- Small enough to take it anywhere
- · Safely removes the top leaving no sharp edges
- By removing the entire top, it allows your nose to enjoy the aroma of your beverage
- Once the lid is removed, you are able to add mint, lemon, citrus and other various spices to enhance the flavor
- Can be used on most 8-19oz beverages

How to Use:

- 1. Open lever on side and place **The Can Topper** on the top of the can.
- 2. Squeeze lever on **The Can Topper** gently and rotate about 90 degrees to attach the can topper to the can. You will hear the click of the blade touching the can.
- 3. While holding the **The Can Topper** with one hand, use your other hand to grab the can by either gripping towards the top or bottom. Do NOT grab the can in the center as it is not as strong.
- 4. Squeeze the lever until you feel it start to flex. Maintain a consistent squeezing force and begin to rotate the can. You do not need to use much force and should be able to easily rotate the can.
- 5. Rotate the can at least one half turn until you hear a series of "cracks" and then a "Pop". Those noises indicate the top has been cut.
- To remove the tool, open the handle all the way so The Can Topper isn't grabbing the can. Rest one of the notches in the handle on the rim of the can and slowly rock in the lid. The lid can then be left attached or removed entirely



Customer Support:

To reach our customer support staff Monday through Friday 8am - 4pm PST, email support@1tac.com or call 877-616-3515, press option 2.